


Installationsanleitung, Guía de Instalacíon, Guida de Installazione, Guide d'Installation, Installatie gids

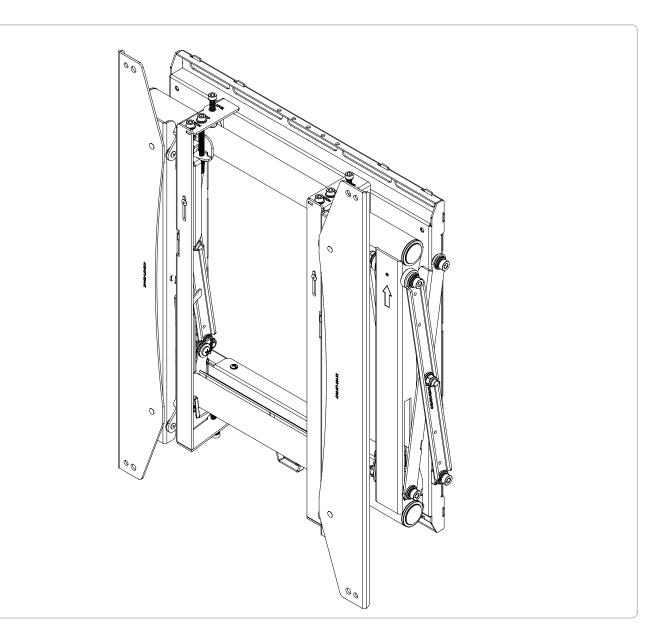

- (GB) Subject to printing errors and technical amendments.
 (NL) Drukfouten en technische wijzigingen voorbehouden.
 (F) Sous réserve de fautes d'impression et de modifications techniques.
 (D) Für Drukfehler übernehmen wir keine Verantwortung. Technische Änderungen vorbehalten.
 (E) Reservados errores de imprenta y sujete a modificationes.
 (C) Con riserva di modifiche techniche e di eventueli errori di stampa.
 (P) Reserva-se a ocorrência de gralhas e de modificações técnicas.
 (H) Nyomdahibák és technikai változtatások joga fenntartva.
 (RU) Sastrega się mozilwość występowania błędów drukarskich i zmian technicznych.
 (RUS) Возможны ошибия при печати и технические модификации.


Designed and engineered in the Netherlands More information on: www.vogels.com

VOGEL'S PRODUCTS BV, HONDSRUGLAAN 93, 5628 DB EINDHOVEN, THE NETHERLANDS



Max: 72,5kg/160lbs

Installation Guide

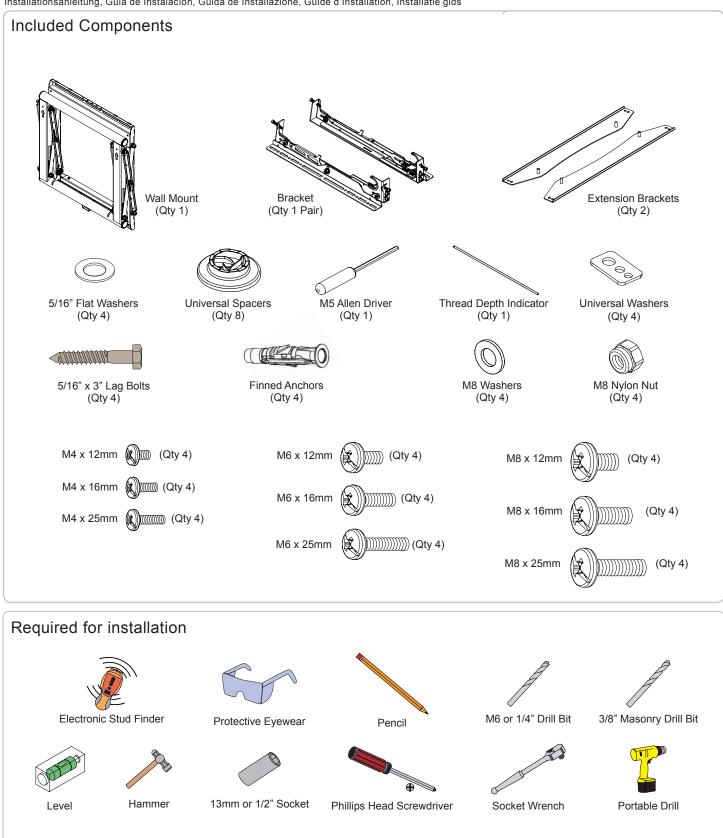




Installation Guide


Installationsanleitung, Guía de Instalacíon, Guida de Installazione, Guide d'Installation, Installatie gids

Wood Stud Installation

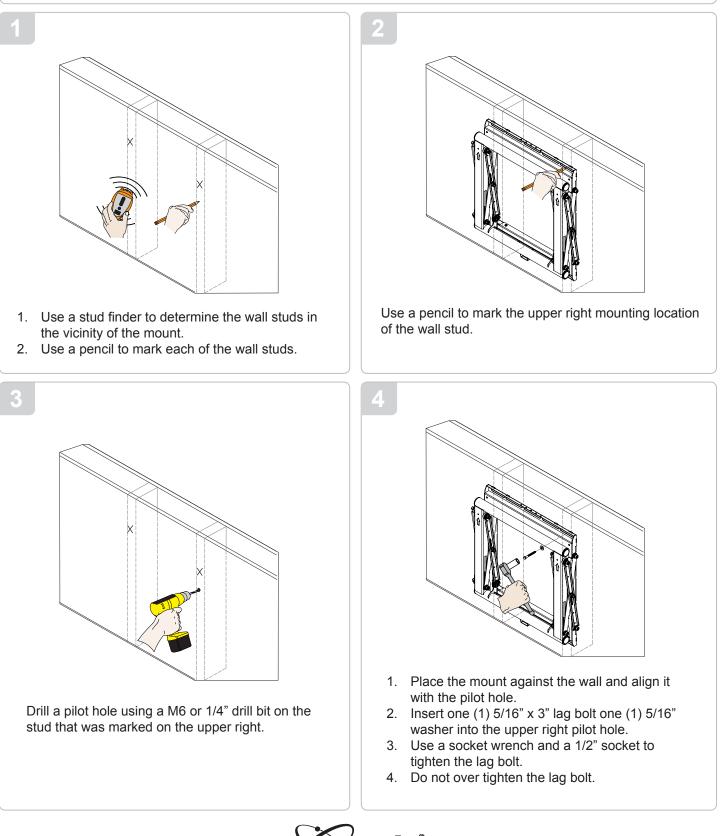




Installation Guide

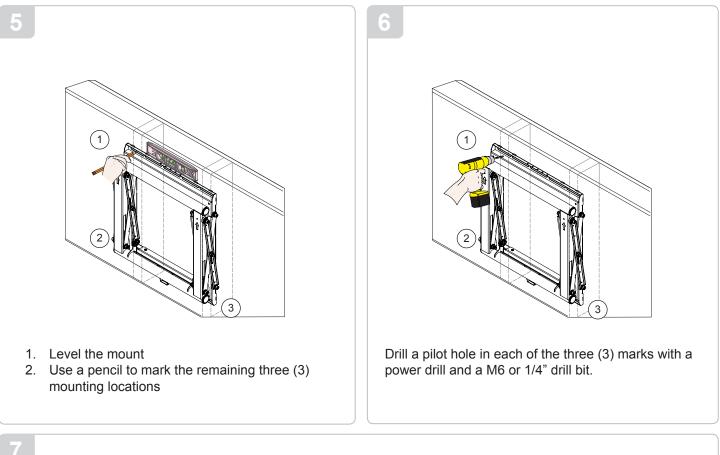

- Insert one (1) 5/16" x 3" lag bolt and one (1) 5/16" washer into each pilot hole.
- 2. Tighten all lag bolts using a socket wrench and 1/2" socket.
- 3. Do not over tighten the lag bolts



Installation Guide

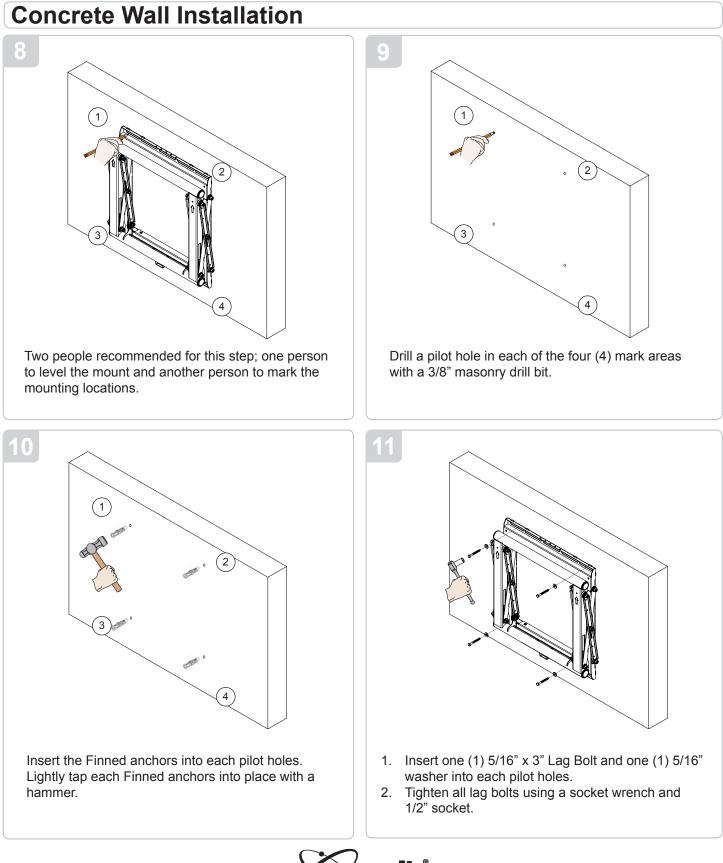




Installation Guide


Installationsanleitung, Guía de Instalacíon, Guida de Installazione, Guide d'Installation, Installatie gids

Installing OPTIONAL Model Specific Spacers

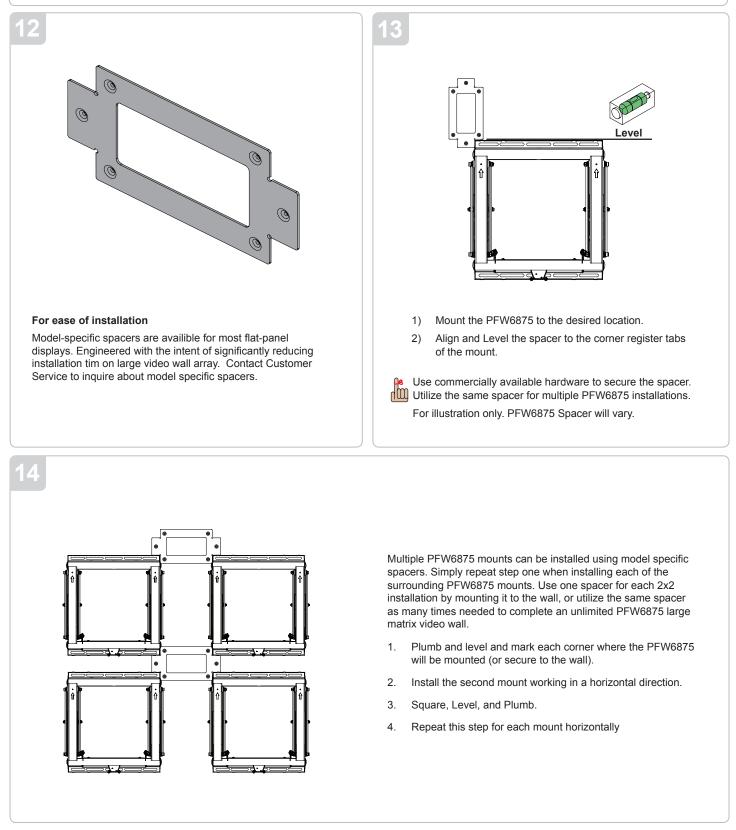

www.vogels.com

Selecting the Mounting Hardware

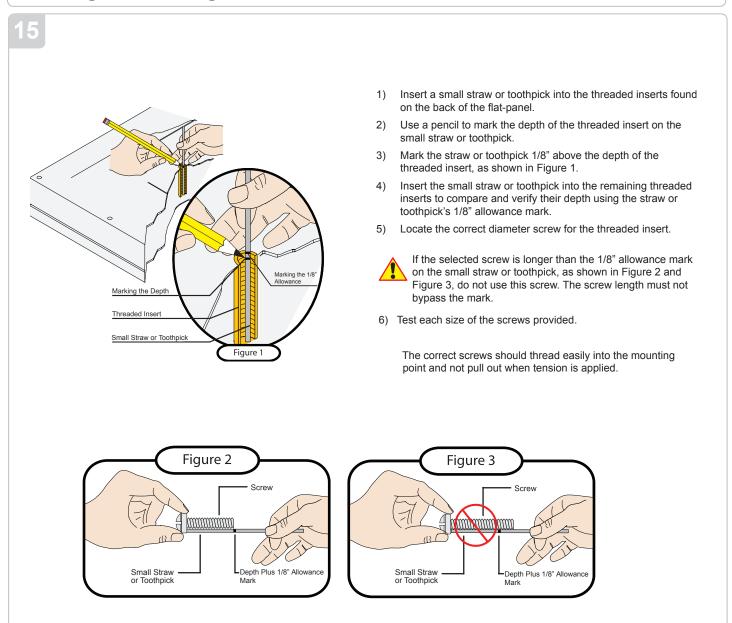



Installation Guide


Installationsanleitung, Guía de Instalacíon, Guida de Installazione, Guide d'Installation, Installatie gids

16 **Universal Washer Installation** Universal Washers are designed to accommodate the various M4, M5, M6 and M8 hole sizes required by flat-panels. 1) Place the flat-panel screen-side down on a soft, flat surface. Me Identify the number and location of the thread inserts on the 2) back of the flat-panel. 3) Aligning the holes on each mounting bracket with the thread inserts on the back of your flat-panel. Secure each mounting bracket to the flat-panel by inserting a 4) minimum of two (2) screws per bracket. Do not over tighten the mounting hardware. Make sure the directional arrows on the mounting brackets are facing up. Symmetrical VISA pattern only. Skip to Step 17 and Step 18 for asymmetrical VISA pattern.

17

Securing the Adapters


Optional adapters are available with your PFW6875 mount. Secure the adapters to the PFW6875 brackets with the supplied M8 Washers and M8 Lock Nuts.

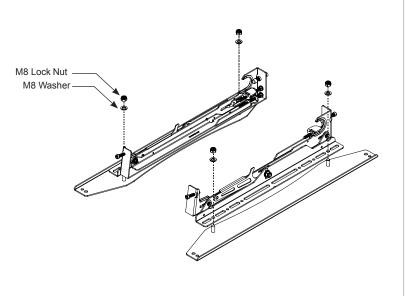



Installationsanleitung, Guía de Instalacíon, Guida de Installazione, Guide d'Installation, Installatie gids

Attaching the Flat-Panel to the Mount

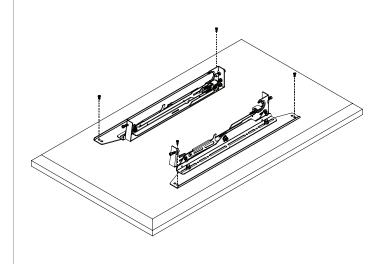

- 1) Place your flat-panel screen-side down on a soft, flat surface.
- 2) Identify the number and location of the thread inserts on the back of your flat-panel.
- 3) Aligning the holes on each mounting bracket with the thread inserts on the back of your flat-panel.
- 4) Secure each mounting bracket to your flat-panel by inserting a minimum of two (2) screws per bracket.




Do not overtighten the mounting hardware.

19

18

Universal Spacer Installation

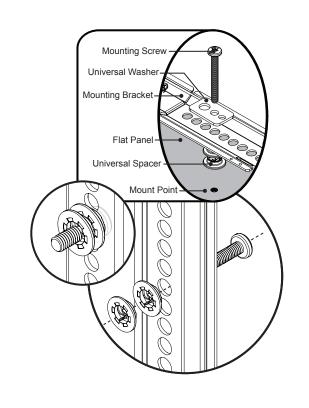

Universal Spacers allow the user to attach the mounting bracket to flat-panels which have recessed or uneven mount points. Each Universal Spacer adds 1/4" to the distance between the mounting bracket and the flat-panel.




The Universal Spacers must be stacked and oriented as shown.




The Universal Spacers must only be installed between the mounting bracket and the flat-panel.




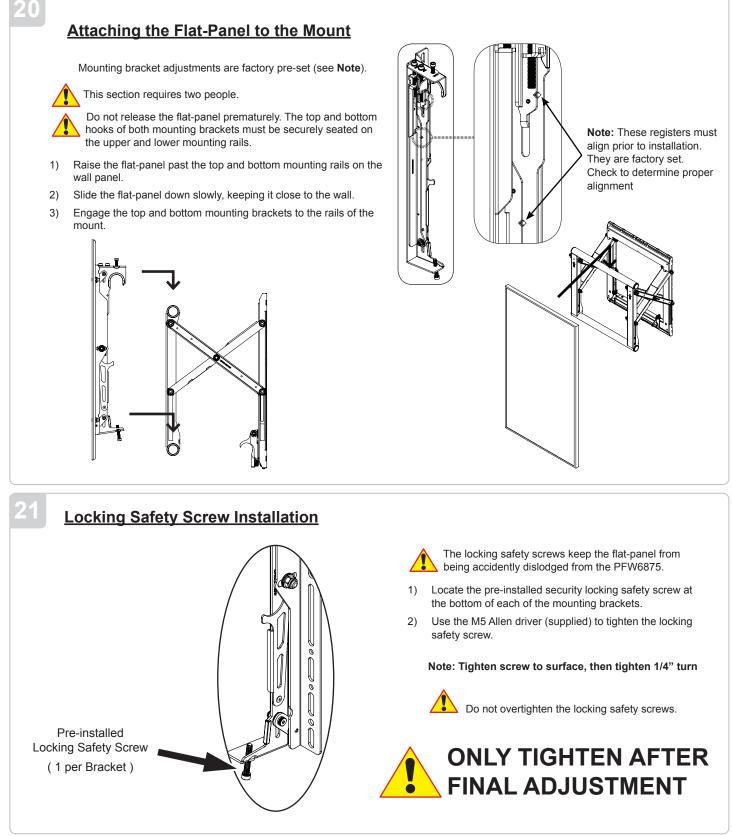



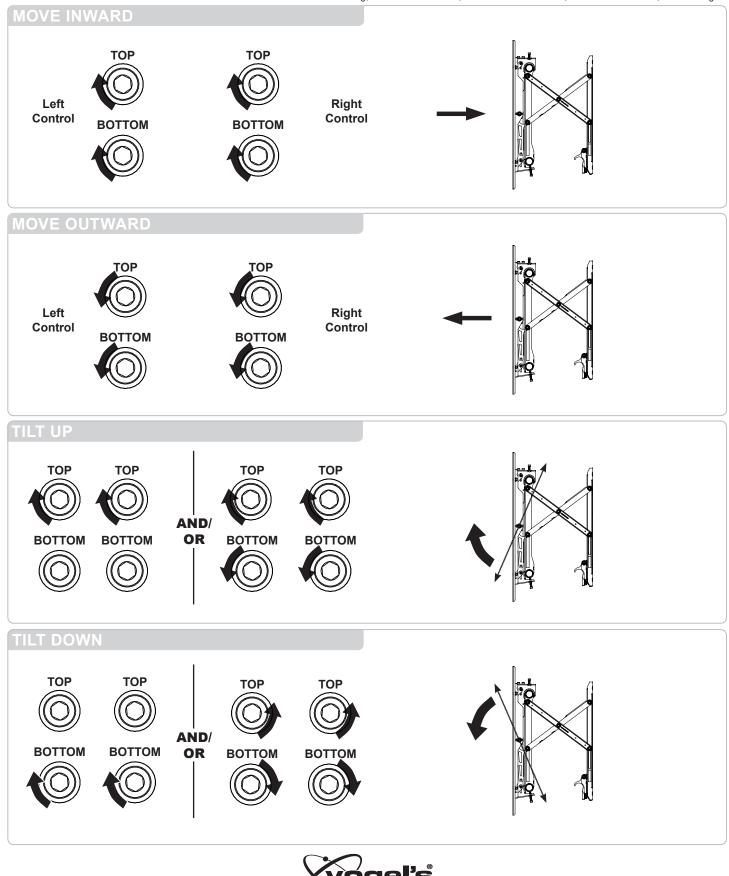


Installation Guide

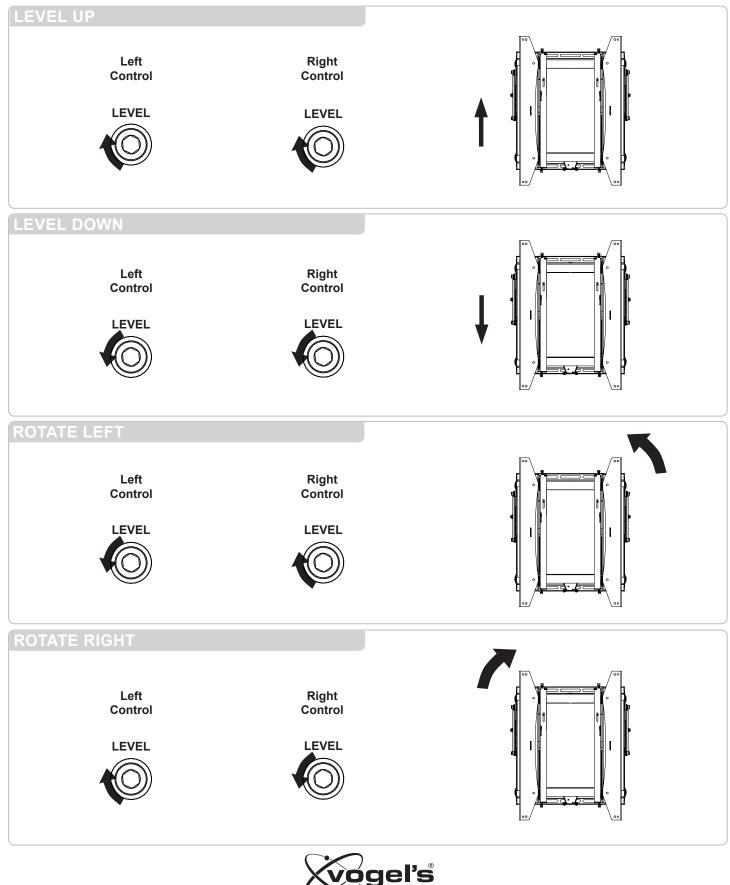


Use the GAPit GO/No Go Gauge (supplied with model specific spacer) as a final step in the process to inspect and adjust the gap to prevent costly replacement and extend the lifespan of the displays.



Damage happens when weight is transferred to the ultra-thin bezels of video wall installations, if the recommended gap specifications of .050" is not maintained vertically and horizontally. This results in image distortion, and costly repairs and replacement

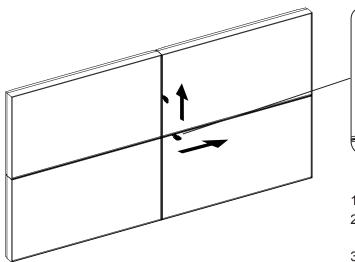

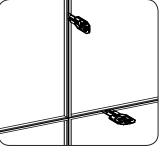

- 1. Swipe GAPit along vertical gap
- 2. Inspect for .050" gap & adjust if needed
- 3. Swipe GAPit along horizontal gap
- 4. Inspect for .050" gap & adjust if needed



đ

SPEC DIV .050" 1.3 MM

GO


NO GO

Installation Guide

Installationsanleitung, Guía de Instalacíon, Guida de Installazione, Guide d'Installation, Installatie gids

<u>Servicing</u>

- 1. Push evenly in the front of the PFW6875 to release the single latch spring lock (Figure 1).
- 2. Slowly pull the front of the PFW6875 to extend the scissor arms (Figure 2).
- 3. Loosen the locking safety screws on both mounting brackets.
- 4. Tilt up the bottom of the flat-panel, then set their kickstands against the bottom tubing of the mount (Figures 2 & 3).
- 5. Perform any neccessary repairs. Close the latch after servicing.

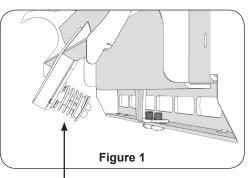

Single Latch Spring Lock

