 





III. Combined-buttons Function


(1) Long press the DO and press PREVIOUS button at the same time, it allows you to enlarge the Spotlight or Laser Spot, narrow them with press DO and NEXT button together.

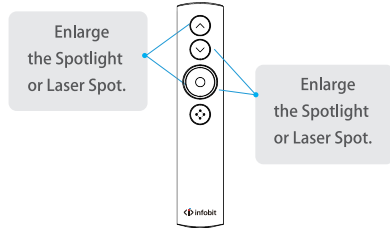

 (2) Exit any function mode by click UP/DOWN and enter again by long press DO.

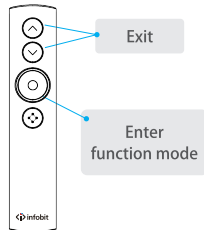

 (3) PPT full screen mode: Long press the page up button for 2 second to enter the PPT full-screen state, and long press again to exit the full-screen state.

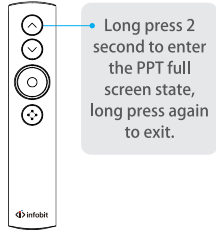

Notice:

The presenter software works with Windows 7 or above, Mac OS x 10.9 or above.

IV. Packing List

- ▶ Presentation Clicker × 1
- ▶ USB cable with 8GB ram × 1
- ▶ User Manual × 1
- ▶ Leather Case × 1

V. Warranty

(1) For the remote, 1-year free maintenance and free replacement if it cannot be repaired

due to quality problem. For accessories, free replacement in 3 months.

(2) Warranty is valid on the basis of quality problem, any physical damage or burn is not applicable.

(3) Normally your remote will be ready in 10 days if reparable, otherwise we will replace you for a new one.

(4) The customer will be responsible for the express charges for sending the remote to the repair location, we will be responsible for express charges sending the remote back.

Name		Contact	
Date	Problem	Solution	Repairman

❗ Safety Notice

Please read this notice before you use the clicker.

USE

- (1) Check battery state on software.
- (2) Plug USB receiver back to clicker after use in case of lost.
- (3) Recharge if there is flash red light.

ENVIRONMENT

- (1) Strong Electromagnetic wave environment will interrupt use.
- (2) Do not put the remote into fire.
- (3) Operating temperature 0-40 Fahrenheit Degrees.
- (4) The remote is not able to use while charging.

 
EQUIPMENT

- (1) Do not disassemble the clicker .
- (2) Any sharp object that would damage the clicker is not allowed.
- (3) Avoid extrusion, collision, dropping.
- (4) Keep clicker in dry environment, it is not waterproof.

© Copyright

Both hardware and software design are protected.All rights reserved.

I. Button Introduction

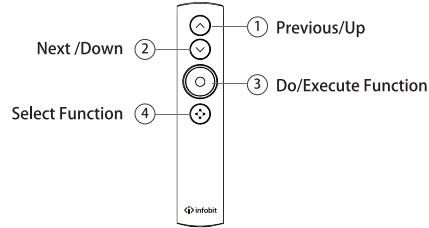


- ① Previous/Up: Click the button to go to previous page or rewind your video.
- ② Next /Down: Click the button to go to next page or fast forward your video.
- ③ Do/Execute Function: Long press the button to performing different functions.
- ④ Select Function: Click to shift to different function, such as Mouse,Spotlight,Digital laser, Zoom, Mark.

II. How to start


As show in the following pictures, first, connect USB cable to your computer and install the software of the presenter which is ready in built-in USB RAM.

Second,unplug the USB receiver and connect it to your personal computer and activate the drive.

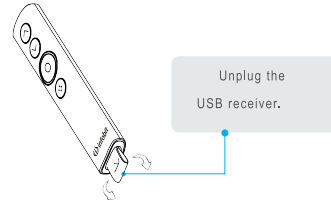

Third, long press the NEXT button and the SELECT FUNTION button together, you will see the flash green light on the top side, and the device will vibrate about 1s, means receiver and the clicker match successfully.

If the green light is off in 20s and there is no vibration, means match fails, please unplug the USB receiver and start the procedure over again.

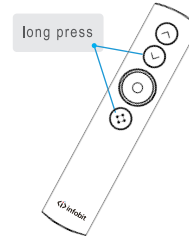

For the first time you plug the USB receiver into your personal computer after you Unpack the remote, the system will install software of the remote automatically and successfully in 30 second, restart or try another USB port of the computer if the Installation process goes too slow or failed. When the software installed successfully,click any button of the remote, if you feel the vibration of the remote, start to use and enjoy your presentation.

