


Fusion

COMBO
under desk power module

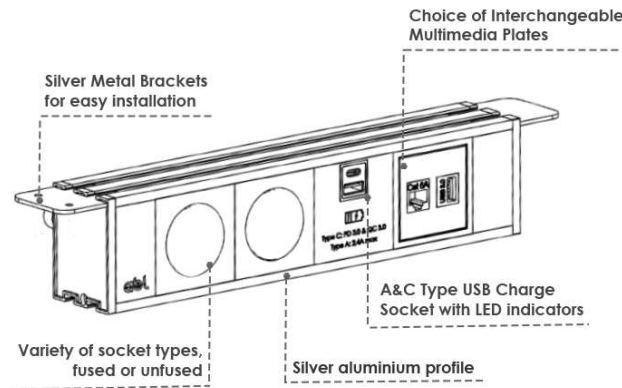

Thank you for purchasing ABL's Fusion power module. Fusion has been manufactured and tested in accordance with relevant standards (see contact page).



USER

MANUAL

INSTALLATION

OPTION 1 - Fix the module under the desk

1. Slide the brackets into the profile indents
2. Attach the bracket using the provided screws according to the designated positions on the brackets



OPTION 2 - Fix the module in the corner of the desk

1. Attach the bracket onto the side of the table

 


2. Slide the module onto the bracket

MAIN FEATURES:

- The module is available in Black or White, with Silver aluminium profile
- Completely configurable, available in variations of sockets USB charge sockets, and media connections
- Rated voltage of Fusion power module unit is 250V AC (**C, E, F, G, J, L**), for **B type sockets** 120V AC
- Nominal intensity of the unit:
 - **13A for G type socket**
 - **16A for B, C, E, F, J, L type sockets**
- G type sockets are individually fused with 3.15A or 5A fuse. Available in up to four sockets with 5A fuse, and in up to six sockets with 3.15A to comply with BS6396
- Silver, metal brackets enable easy under desk installation
- All standard options come with 0.5m drop lead to 3 Pole Connector GST. Cable type: H05VV-F 3x1.5 mm²

Note: The most common socket types:



Contact us for more information.

SAFETY NOTES:

- Items such as Vacuum Cleaners, Kettles, Coffee Makers, and Fan Heaters should not be connected via these power modules
- Installation is to be carried out by a qualified professional



www.abl-ltd.com



SCAN ME



Complies with BS 5733 (UK)
IEC 60884-1 and IEC 60884-2-7 (Europe)



Kitemark certified on 13A Plugs and Socket outlets
(KM686563)



Manufacturing in-house within central
Europe under strict compliance with
ISO 9001:2015

CONTACT US

UK DISTRIBUTION CENTRE

14 Fleming Close
Park Farm Ind. Estate
Wellingborough
Northants NN8 6UF
United Kingdom


+44 (0) 1933 400 080
sales@abl-ltd.com

EMEA DISTRIBUTION CENTRE

Lava Tolstoja 25
32103 Cacak
Serbia

+381 (0) 32 420 100
sales@abl.co.rs

CONTENTS:

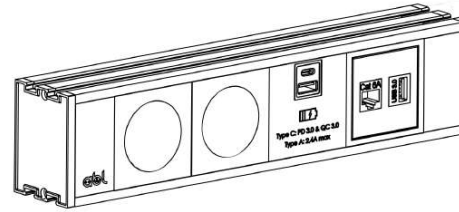

- **Fusion power module**



- **Brackets**



Note: Use mains lead cable to connect Fusion power module with the main power supply

WARRANTY CONDITIONS:

ABL warrants this product as free of defects in material, design, and workmanship for the period of twenty-four (24) months from the original date of receipt of the product, unless applicable national laws stipulate otherwise. If during the period of warranty this product proves defective under normal use and service you should return the product to the retailer from whom it was originally purchased. The liability of the ABL is limited to the cost of repair and/or replacement of the unit under warranty. The warranty is void if a failure occurs due to the following reasons:

- Improper device installation
- Improper handling
- Improper transport
- Force majeure



WARNING: Do not use this product for any other purpose other than which it was designed for.

MAINTENANCE:

Do not open, disassemble, change, or modify the device. Every unauthorized opening or repairing of the device leads to loss of warranty. During device usage, you need to follow basic safety measures. since safety requirements vary, please check with local laws.

